

DAIKIN



OPERATING MANUAL

Operating Manual
Handset Wired


English

OM-BRC51D-0616(2)-DAIKIN
Part No.: R08019045189B




BRC51D Controller Indication

BRC51D61/63 Controller Indication

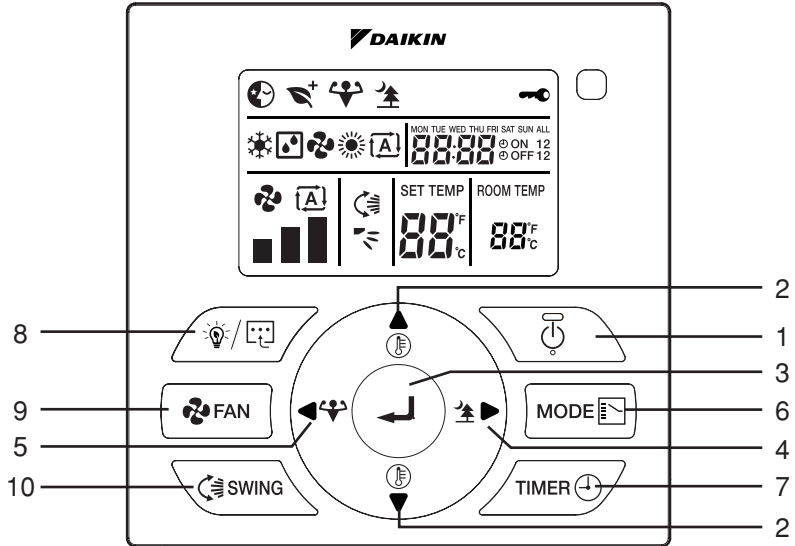

BRC51D62/66 Controller Indication

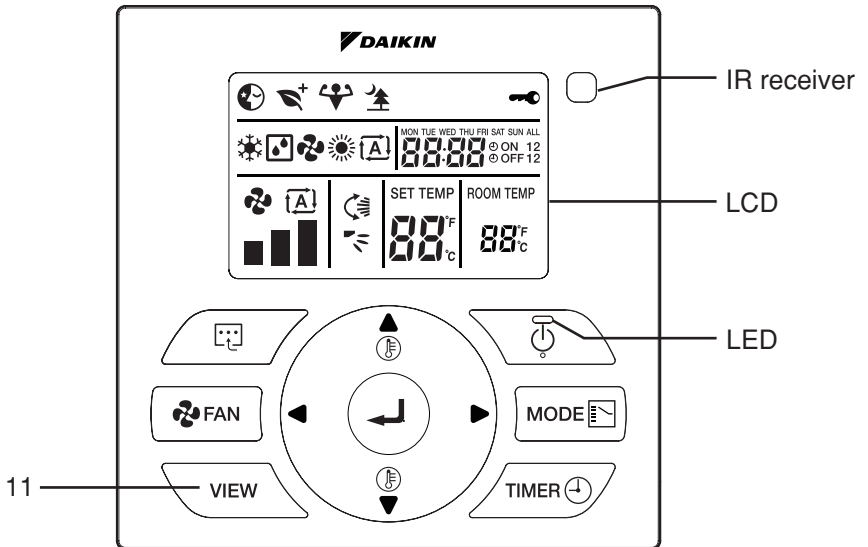

OPERATING INSTRUCTION

1. **⏻ Button**
 - Press once to start the air conditioner unit.
 - Press again to stop the unit.
2. **▲ and ▼ Button**
 - Press the ▲ or ▼ button to increase or decrease the set temperature.
 - Pressing FAN and SWING or VIEW button simultaneously to toggle the temperature setting between °C and °F.

⚠ NOTE

- Room Temperature Display is available for selected models only.

3. **⏻ Button**
 - Continuously press for 3 seconds to turn ON/OFF the LED display on wall mounted unit.
4. **🌳▶ Button (Model dependent)**
 - Press 🌳▶ button to turn ON/OFF Quiet operation.
5. **◀🌳 Button (Model dependent)**
 - Press ◀🌳 button to turn ON/OFF Powerful operation.
6. **MODE  Button**
 - Press the MODE  button to select the type of operating mode.
 - For cooling only model, the available modes are: **COOL** (❄), **DRY** (💧), **FAN** (🌀).
 - For heat pump model, the available modes are: **COOL** (❄), **HEAT** (🔥), **AUTO** (⏻), **DRY** (💧), **FAN** (🌀).
7. **TIMER ⌚ Button**

⚠ NOTE

- Idle 10 seconds to exit the clock setting.
- The clock setting is in 24-hour clock.

A) To set the clock – Press **TIMER ⌚** and **⏻** button simultaneously for 3 seconds.

- a. Hour will blink.

88:88

- b. Press ▲ or ▼ button to change the Hour.
- c. Press ⏻ button to confirm the Hour, then Minute will blink.

88:88

- d. Press ▲ or ▼ button to change the Minute.
- e. Press ⏻ button to confirm the Minute, then “MON” will blink.
- f. Press ◀ or ▶ button to change the Day.
- g. Press ⏻ button to confirm the Day.

B) ON/OFF Timer Setting – Daily Timer Setting

- a. Continuously press **TIMER**  button for 3 seconds.
- b. ON Timer 1 Setting
 - I. “MON” will blink.
 - II. Use  or  button to select the Day and press  button to confirm the Day.
 - III. Hour will blink. Use  or  button to toggle between Hour and Minute.



Press  or  button to change the Hour and Minute.

Press  button to confirm the setting.

- IV. Repeat Step II to III for the timer setting of other days.

- c. ON Timer 2 Setting
 - I. Press **TIMER**  button again to enter ON Timer 2 setting, then “MON” will blink.
 - II. Use  or  button to select the Day and press  button to confirm the Day.
 - III. Hour will blink.



Press  or  button to change the Hour.

Press  button to confirm the Hour, then Minute will blink.

- IV. Repeat Step II to III for the timer setting of other days.

- d. OFF Timer 1 Setting
 - I. Press **TIMER**  button again to enter OFF Timer 1 setting, then “MON” will blink.
 - II. Use  or  button to select the Day and press  button to confirm the Day.
 - III. Hour will blink.



Press  or  button to change the Hour.

Press  button to confirm the Hour, then Minute will blink.

- IV. Repeat Step II to III for the timer setting of other days.

e. OFF Timer 2 Setting

- I. Press **TIMER**  button again to enter OFF Timer 2 setting, then "MON" will blink.
- II. Use  or  button to select the Day and press  button to confirm the Day.
- III. Hour will blink.




Press  or  button to change the Hour.

Press  button to confirm the Hour, then Minute will blink.


IV. Repeat Step II to III for the timer setting of other days.

C) Activation of ON/OFF Timer

- a. Press **TIMER**  button to activate On Timer.  **ON 1** will blink.
- b. Press  button for navigation of On Timer selection.



- c. Press  button to confirm the selection, then  **OFF 1** will blink.
- d. Press  button for navigation of Off Timer selection.



- e. Press  button to confirm the selection and exit.

 NOTE

- It is not advisable to set ON TIMER and OFF TIMER to have same values.
- Shall these occur, the effective timer will be treated with priority as stated in table below:

Priority	Timer
1 (Highest)	ON TIMER 2
2	OFF TIMER 2
3	ON TIMER 1
4 (Lowest)	OFF TIMER 1


8. Button

- Press  button to turn ON/OFF the light on ceiling cassette unit.
- Continuously press for 3 seconds to enter Feature selection. **SLEEP** () will blink, use  or  button to scroll between **SLEEP** (), **ECO+** (), **POWERFUL** (), **QUIET** () button. Press  button to confirm the feature. If any button is not pressed within 10 seconds, it will exit the Feature selection. Some of the features are available for selected models only.

Features	Remarks
SLEEP ()	Available in COOL , HEAT and AUTO mode only.
ECO+ ()	Set temperature automatically adjust to eco-friendly level. Available in COOL and HEAT mode only.
POWERFUL ()	If user presses the FAN button or QUIET button or turn off the unit, the POWERFUL will be disabled. Available in COOL and HEAT mode for selected models.
QUIET ()	If user presses the FAN button or POWERFUL button or turn off the unit, the QUIET feature will be disabled. Available in COOL and HEAT mode for selected models.

9. FAN Button

- Press  FAN button continuously will toggle the fan speed in the following order:



NOTE

- Fan setting is not available in **DRY** () mode.
- **FAN** () mode does not have Auto fan.

- Continuously press for 3 seconds to ON/OFF  Key Lock function. Only  button can be pressed during Key Lock activation.

10. SWING Button

- Press  SWING button to turn ON/OFF the automatic air swing function.
- To distribute the air to a specific direction, press  SWING button and wait until the louver move to the desired direction and press the button once again to confirm.

Special Swing Mode selection (model dependent)

- Continuously press for 3 seconds to enter Special Swing Mode. () will blink. Press  and  button to toggle between ,  and . Press  button for confirmation.

NOTE

- Special Swing Mode will only be activated when  **SWING** is ON.

11. **VIEW**

- Press **VIEW** button to turn ON the backlight.

ERROR INDICATOR



NOTE

- The LED will blink if error occurred.

If there is any abnormal condition detected, BRC51D controller will blink the error code. The format for the error code will be as following:

DX Error Code

ERROR CODE	MEANING
E01	Room Sensor Open or Short
E02	Indoor Coil Sensor Open
E03	Outdoor Coil Sensor Open
E04	Compressor Overload/Indoor Coil Sensor Short/Outdoor Coil Sensor Short
E05	Low Refrigerant Charge/Gas Leak/Outdoor Abnormal
E06	Water Pump Fault
E07	Outdoor Coil Sensor Exist (MS model)
E08	Hardware Error (Tact Switch Pin Short)
E09	Indoor Fan Feedback Error
EE	EEPROM Error

CW Error Code

ERROR CODE	MEANING
E01	Room Sensor Open or Short
E02	Pipe Water Sensor Open or Short
E04	Pipe Water Temperature Poor
E05	Pipe Water Temperature Bad/Fault
E06	Water Pump Error
E08	Hardware Error (Tact Switch Pin Short)
E09	Indoor Fan Feedback Error

For Inverter Only

ERROR CODE	MEANING
00	Normal
A1	Indoor PCB Error
A3	Drain Pump Abnormal
A5	Antifreeze (Cooling)/Heat Exchanger Overheat (Heating)
A6	Indoor Fan Motor Abnormal
AH	Electrical Air Cleaner Abnormal
C4	Indoor Heat Exchanger (1) Thermistor Short/Open
C5	Indoor Heat Exchanger (2) Thermistor Short/Open
C7	Louver Limit Switch Error
C9	Indoor Room Thermistor Short/Open

ERROR CODE	MEANING
E1	Outdoor PCB Error
E3	High Pressure Protection
E4	Low Pressure Protection
E5	Compressor Motor Lock/Compressor Overloaded
E6	Compressor Start-Up Error
E7	Outdoor DC Fan Motor Lock
E8	AC Input Over Current
E9	EXV Error
EA	4 Way Valve Error
F3	Discharge Pipe Overheat
F6	Heat Exchanger Overheat
HO	Compressor Sensor System Error
H3	High Pressure Switch Error
H6	Compressor Feedback Detection Error
H7	Fan Motor Overloaded/Overcurrent/Sensor Abnormal
H8	AC Current Sensor Error
H9	Outdoor Air Thermistor Short/Open
J1	Pressure Sensor Error
J3	Compressor Discharge Pipe Thermistor Short/Open/Misplaced
J5	Suction Pipe Thermistor Short/Open
J6	Outdoor Heat Exchanger Thermistor Short/Open
J7	Subcooling Heat Exchanger Thermistor Short/Open
J8	Liquid Pipe Thermistor Short/Open
J9	Gas Pipe Thermistor Short/Open
L1	Inverter Outdoor PCB Error
L3	Outdoor Control Box Overheat
L4	Heat Sink Overheat
L5	IPM Error/IGBT Error
L8	Inverter Compressor Overcurrent
L9	Compressor Overcurrent Prevention
LC	Communication Error (Outdoor Control PCB And Inverter PCB)
P1	Open Phase or Voltage Unbalance
P4	Heat Sink Thermistor Short/Open
PJ	Capacity Setting Error
U0	Insufficient Gas
U2	DC Voltage Out of Range
U4	Communication Error
U7	Communication Error (Outdoor Control PCB And IPM PCB)
UA	Installation Error
UF	Piping & Wiring Installation Mismatch/Wrong Wiring/Insufficient Gas
UH	Antifreeze (Other Rooms)

HARDWARE SETTING

⚠ NOTE

- Hardware setting should be performed by installers or technicians.

The wired handset has 3 jumpers option to control the board function.

Table 2.0: Summary of Hardware Settings

OPTION	With Jumper	Without Jumper
SET TEMP. RANGE	Set Temperature : 20°C - 30°C	Set Temperature : 16°C - 30°C
*TURBO_QUIET	Deactivate Turbo & Quiet Feature	Activate Turbo & Quiet Feature
ROOM TEMPERATURE	Deactivate Room Temperature Display	Activate Room Temperature Display

* Note: Turbo & Quiet Feature only applicable to specific model.

INSTALLATION

⚠ NOTE

Installation and maintenance should be performed by qualified persons who are familiar with local code and regulation, and experienced with this type of appliance.

1. Accessories

The following accessories are included together with this manual. If any part is missing, contact your dealer immediately.

- 1.1 Remote controller
- 1.2 Screw (2 pieces)
- 1.3 Operational manual


Screw	Handset	Operation Manual
		
(2pcs.)	(1pcs.)	(1pcs.)

2. Step-by-step guide

2.1 Remove upper case.

Insert a screwdriver in the recess of lower case to remove the upper case (2 points).

Remote controller printed-circuit board is installed on the upper case. Be careful not to damage the printed-circuit board with the screwdriver.

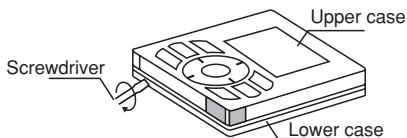


Be careful not to let dust or moisture touch the printed-circuit board.

Insert and twist the screwdriver 'LIGHTLY' for removal.

2.2 Location where the wiring will enter the remote controller.

Top center outlet

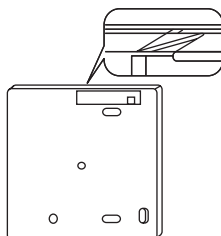


Cut the plastic at the notched area and remove any remaining burrs.

2.3 Installation procedure for the lower case.

When wiring the remote controller through the top center or rear access points, attachment of the wire to the lower case is required before it is wall mounted. Closely follow the wiring procedures.

Wall installation

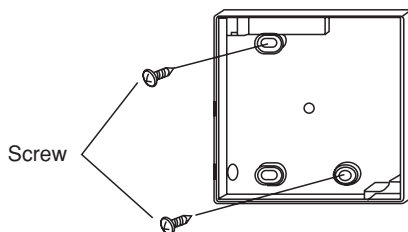


NOTE

- Install the control on a flat surface only.
- To prevent deformation of the lower case, avoid over-tightening the installation screws.

2.4 Install the upper case.

- Align the upper case with tabs of the lower case (6 points), insert and install the upper case.
- Install the wiring with care to prevent pinching.
- Peel off the protective membrane which overlays the upper case.

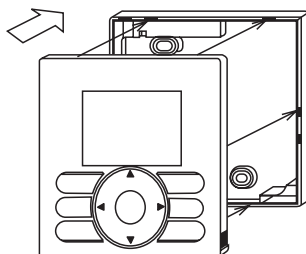

- In the event that there is any conflict in the interpretation of this manual and any translation of the same in any language, the English version of this manual shall prevail.
- The manufacturer reserves the right to revise any of the specification and design contain herein at any time without prior notification.

DAIKIN EUROPE N.V.

Zandvoordestraat 300, B-8400 Oostende,
Belgium

DAIKIN MIDDLE EAST AND AFRICA FZE

P.O.Box 18674, Jebel Ali Free Zone, Dubai-UAE
Email: info@daikinmea.com
Web: www.daikinmea.com

Importer for Turkey:

DAIKIN ISITMA ve SOĞUTMA SİSTEMLERİ SAN TİC A.Ş.

Allianz Plaza-Kucukbakkalkoy Mah.Kayisdagi Cad.No:1 34750
Atasehir-ISTANBUL / TURKIYE

DAIKIN INDUSTRIES, LTD.

Head office:

Umeda Center Bldg., 2-4-12, Nakazaki-Nishi,
Kita-ku, Osaka, 530-8323 Japan

Tokyo office:

JR Shinagawa East Bldg., 2-18-1, Konan,
Minato-ku, Tokyo, 108-0075 Japan
<http://www.daikin.com/global/>

- اذا حدث اي تعارض في تفسير هذا الكتيب واي اختلاف في الترجمة نفسها بأية لغة كانت. تكون النسخة الانكليزية هي السائدة.
- يحتفظ المصنع بحق تعديل التصميم واية مواصفات موجودة هنا في اي وقت من دون إشعار مسبق.

DAIKIN INDUSTRIES, LTD.

Head office:
Umeda Center Bldg., 2-4-12, Nakazaki-Nishi,
Kita-ku, Osaka, 530-8323 Japan

Tokyo office:
JR Shinagawa East Bldg., 2-18-1, Konan,
Minato-ku, Tokyo, 108-0075 Japan
<http://www.daikin.com/global/>

DAIKIN EUROPE N.V.

Zandvoordestraat 300, B-8400 Oostende,
Belgium

DAIKIN MIDDLE EAST AND AFRICA FZE

P.O.Box 18674, Jebel Ali Free Zone, Dubai-UAE
Email: info@daikinmea.com
Web: www.daikinmea.com


:Importer for Turkey

DAIKIN ISITMA ve SOĞUTMA SİSTEMLERİ SAN TİC A.Ş.

Allianz Plaza-Kucukbakkalkoy Mah.Kayısdagi Cad.No:1 34750
Atasehir-ISTANBUL / TURKIYE

2.2 المكان الذي ستدخل فيه أسلاك جهاز التحكم عن بُعد

مخرج المركز العلوي

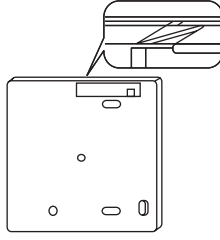


اقطع البلاستيك في المنطقة المحددة وأزل أي نتوءات متبقية.

2.3 إجراء تثبيت الغطاء السفلي.

عند توصيل وحدة التحكم عن بُعد من خلال المركز العلوي أو نقاط الوصول الخلفية، يتطلب تثبيت السلك بالغطاء السفلي قبل أن يُعلق على الحائط. اتبع إجراءات توصيل الأسلاك بالضبط.

التثبيت على الحائط

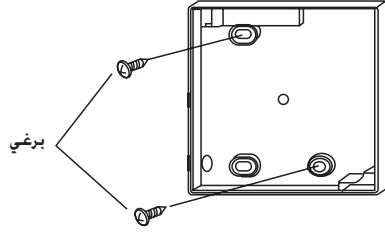


⚠ ملاحظة

- تثبيت جهاز التحكم على سطح مستو فقط.
- لمنع تشوه الغطاء السفلي، وتجنب الإفراط في تشديد ربط براغي التثبيت.

2.4 تثبيت الغلاف العلوي.

- قم بمحاذاة الغلاف العلوي مع علامات الغلاف السفلي (6 نقاط). أدخل وثبت الغلاف العلوي.
- ثبت توصيل الأسلاك مع الحرص على منع ثنيه.
- قشر الغلاف الواقي الذي يعلو الغطاء العلوي.

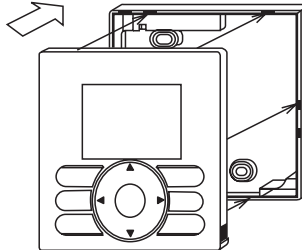

ضبط الجهاز

ملاحظة

— يجب إجراء ضبط الجهاز بواسطة عمال التركيب أو الفنيين.

تتضمن السماعة السلكية خيار 3 وصلات عبور للتحكم في وظيفة اللوحة.
الجدول 2.0 : ملخص إعدادات الجهاز

الخيار	مع وصلة العبور	بدون وصلة العبور
ضبط نطاق درجة الحرارة	ضبط درجة الحرارة : درجة مئوية 30 - درجة مئوية 20	ضبط درجة الحرارة : درجة مئوية 30 - درجة مئوية 16
*TURBO_QUIET	تعطيل ميزة وضع التريو والوضع الهادئ	تنشيط ميزة وضع التريو والوضع الهادئ
درجة حرارة الغرفة	تعطيل عرض درجة حرارة الغرفة	تنشيط عرض درجة حرارة الغرفة

* ملاحظة: تنطبق ميزة وضع التريو والوضع الهادئ على طراز محدد فقط.


التثبيت

ملاحظة

يجب أن يتم القيام بأعمال التركيب والصيانة من قبل الأشخاص المؤهلين الذين هم على دراية بالقوانين واللوائح المحلية، وأن يكون لديهم خبرة بهذا النوع من الأجهزة.

1. الملحقات


- يتم تقديم الملحقات التالية مع هذا الدليل. إذا كان هناك أي جزء مفقود، اتصل بالموزع على الفور.
- 1.1 جهاز التحكم عن بُعد
 - 1.2 برغي (2 قطعة)
 - 1.3 دليل التشغيل

دليل التشغيل	سماعة	برغي
		
(1 قطعة)	(1 قطعة)	(2 قطعة)

2. دليل خطوة بخطوة

2.1 أزل الغطاء العلوي.

أدخل مفك البراغي في الفجوة الموجودة في الغطاء السفلي لإزالة الغطاء العلوي (نقطتين).

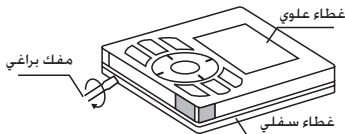

إدراج وتحريف مفك "بخفة" لإزالة.

يتم تثبيت جهاز تحكم عن بعد لوحة الدوائر المطبوعة على حالة العلوي. يجب الحرص على عدم الإضرار مجلس الدوائر المطبوعة مع مفك البراغي

يجب الحرص على عدم ترك الغبار أو الرطوبة لمس لوحة الدوائر المطبوعة

كود الخطأ	المعنى
E1	خطأ في لوحة الدائرة الخارجية
E3	حماية الضغط مرتفعة
E4	حماية الضغط منخفضة
E5	محرك الضاغط مقفول/الضاغط عمل بإفراط
E6	خطأ في بداية عمل الضاغط.
E7	محرك مروحة DC الخارجية مغلقة
E8	مدخل التيار المتردد على التيار المستمر
E9	خطأ في EXV
EA	خطأ في صمام الأربع اتجاهات
F3	ارتفاع حرارة أنبوب التفريغ
F6	ارتفاع حرارة مُبدل الحرارة
HO	خطأ في نظام استشعار الضاغط
H3	خطأ في تغيير الضغط المرتفع
H6	خطأ في التعرف على تغذية الضاغط
H7	إفراط عمل محرك المروحة/تيار زائد/جهاز الاستشعار غير طبيعي
H8	خطأ في جهاز استشعار التيار المستمر للتكييف.
H9	ترمسور الهواء الخارجية غير متصل/مفتوح
J1	خطأ في جهاز استشعار الضغط.
J3	ترمسور أنبوب تفريغ الضاغط غير متصل/مفتوح/غير مثبت في موضعه
J5	ترمسور أنبوب الشفط غير متصل/مفتوح
J6	ترمسور مُبدل الحرارة الخارجي غير متصل/مفتوح
J7	ترمسور مُبدل الحرارة للتبريد الفرعي غير متصل/مفتوح
J8	ترمسور أنبوب السائل غير متصل/مفتوح
J9	ترمسور أنبوب الغاز غير متصل/مفتوح
L1	خطأ في لوحة الدائرة الخارجية للمحول
L3	ارتفاع حرارة صندوق التحكم الخارجي
L4	ارتفاع حرارة جهاز تقليل درجة الحرارة
L5	خطأ في IPM/خطأ في IGBT
L8	زيادة تيار ضاغط المحول
L9	منع زيادة تيار الضاغط
LC	خطأ في التوصيل (لوحة دائرة التحكم الخارجية و لوحة دائرة المحول)
P1	عدم اتزان حالة الفتحة أو عدم اتزان الجهد
P4	ترمسور امتصاص الحرارة غير متصل/مفتوح
PJ	خطأ في ضبط القدرات
U0	غاز غير كافٍ
U2	فرق جهد التيار المستمر خارج النطاق المُحدد
U4	خطأ في التوصيل
U7	خطأ في التوصيل (لوحة دائرة التحكم الخارجية و لوحة دائرة IPM)
UA	خطأ في التركيب
UF	عدم تطابق تركيب الأنابيب والأسلاك/خطء في توصيل الأسلاك/غاز غير كافٍ
UH	مضاد للتجمد (غرف أخرى)

مؤشر الخطأ



– ستومض شاشة LED إذا حدث خطأ

إذا تم اكتشاف أي حالة غير طبيعية، فسيظهر جهاز التحكم BRC51D وميض برمز الخطأ. سيكون شكل كود الخطأ كالتالي:

كود أخطاء DX

كود الخطأ	المعنى
E01	جهاز استشعار الغرفة مفتوح أو غير متصل
E02	جهاز استشعار الملف الداخلي مفتوح
E03	جهاز استشعار الملف الخارجي مفتوح
E04	حمل زائد على الضاغط/جهاز استشعار الملف الداخلي غير متصل/ جهاز استشعار الملف الخارجي غير متصل
E05	شحن مُبَدَّد منخفض/تسرب غاز/عطل خارجي
E06	خطأ في مضخة المياه
E07	وجود جهاز استشعار الملف الخارجي (موديل MS)
E08	خطأ في الجهاز (زر مفتاح الحساس غير متصل)
E09	خطأ مروحة التغذية الداخلية
EE	خطأ في ذاكرة القراءة القابلة للمسح (EEPROM)

كود أخطاء CW

كود الخطأ	المعنى
E01	جهاز استشعار الغرفة مفتوح أو غير متصل
E02	جهاز استشعار أنبوب المياه مفتوح أو غير متصل
E04	درجة حرارة أنبوب المياه ضعيفة
E05	درجة حرارة أنبوب المياه سيئة/خاطئة
E06	خطأ في مضخة المياه
E08	خطأ في الجهاز (زر مفتاح الحساس غير متصل)
E09	خطأ مروحة التغذية الداخلية

لمحول التيار فقط

كود الخطأ	المعنى
00	طبيعي
A1	خطأ في لوحة الدائرة الداخلية
A3	مضخة التصريف غير طبيعية
A5	تجميد (تبريد)/مُبدل الحرارة تعرض لحمل زائد (ارتفاع درجة الحرارة)
A6	محرك المروحة الداخلية غير طبيعي
AH	مُنقى الهواء الكهربائي غير طبيعي
C4	ترمستور مُبدل الحرارة الداخلي (1) غير متصل/مفتوح
C5	ترمستور مُبدل الحرارة الداخلي (2) غير متصل/مفتوح
C7	خطأ في تغيير وضع الريشة
C9	ترمستور الغرفة الداخلية غير متصل/مفتوح

8.




- اضغط على لتشغيل/إيقاف الضوء على وحدة التشغيل بالسقف.
- اضغط باستمرار لمدة 3 ثوانٍ للدخول في اختيار المميزات. وضع النوم (SLEEP). استخدم زر أو زر للتنقل بين وضع النوم (SLEEP)، ECO+ ()، POWERFUL ()، QUIET ()، اضغط على زر لتأكيد اختيار الخاصية. إذا لم يتم الضغط على أي زر في غضون 10 ثوانٍ، فسيتم إنهاء اختيار الخاصية. تتوفر بعض الخصائص للموديلات المُختارة فقط.

الخصائص	ملاحظات
SLEEP ()	متوفر فقط ضمن أوضاع COOL و HEAT و AUTO.
ECO+ ()	تعيين ضبط درجة الحرارة تلقائيًا على المستوى الصديق للبيئة. متوفر فقط ضمن أوضاع COOL و HEAT.
POWERFUL ()	إذا ضغط المستخدم على زر FAN أو زر الوضع QUIET أو إيقاف تشغيل الوحدة، الوضع POWERFUL الشديد. متوفر فقط ضمن أوضاع COOL و HEAT للموديلات المُختارة.
QUIET ()	إذا ضغط المستخدم على زر FAN أو زر الوضع POWERFUL أو إيقاف تشغيل الوحدة، سيتم تعطيل ميزة QUIET. متوفر فقط ضمن أوضاع COOL و HEAT و للموديلات المُختارة.

9.



- اضغط على زر FAN باستمرار وسيظهر تبديل سرعة المروحة وفقًا للأمر التالي:



ملاحظة ⚠

- إعدادات سرعة المروحة غير متوفرة في وضع DRY ().
- لا يتضمن وضع FAN () خاصية المروحة التلقائية.

- اضغط باستمرار لمدة 3 ثوانٍ لتشغيل/إيقاف وظيفة مفتاح الإغلاق. يمكن الضغط على زر فقط أثناء تفعيل قفل لوحة المفاتيح.

10.



- اضغط على زر SWING لتشغيل/إيقاف خاصية دوران الهواء التلقائية.
- لتوزيع الهواء على بعض الاتجاهات، اضغط على زر SWING وانتظر حتى تتحرك ريشة الوحدة إلى الاتجاه المرغوب واضغط على الزر مرة أخرى للتأكيد.

اختيار وضع دوران خاص (تابع الموديل)

- اضغط باستمرار لمدة 3 ثوانٍ للدخول في وضع دوران خاص. () ستومض، اضغط على زر و زر للتبديل بين وضع , , ووضع . اضغط على زر لتأكيد اختيار الخاصية.

ملاحظة ⚠

- يُفَعَّل وضع الدوران الخاص فقط عند تشغيل وضع SWING ().

11. VIEW

- اضغط على زر VIEW لتشغيل إضاءة الخلفية.

e. إيقاف إعداد المؤقت 2


- i. اضغط على زر **⬆** TIMER مرة أخرى لإيقاف إعداد المؤقت 2، ثم سيومض "MON".
- ii. استخدم زر **⬅** أو زر **➡** لتحديد اليوم واضغط على زر **⬅** لتأكيد اليوم.
- iii. ستومض الساعة.




- اضغط على زر **⬆** أو زر **⬅** لتغيير الساعة.
- اضغط على زر **⬅** لتأكيد الساعة، ثم ستومض الدقائق.
- iv. كرر الخطوات من الثانية إلى الثالثة لإعداد مؤقت الأيام الأخرى.

(C) تفعيل تشغيل/إيقاف المؤقت

- a. اضغط على زر **⬆** TIMER لتفعيل تشغيل المؤقت. **1 ON** ستومض.
- b. اضغط على زر **➡** للتنقل حتى الوصول إلى اختيار تشغيل المؤقت.



- c. اضغط على زر **⬅** لتأكيد الاختيار، ثم سيومض **1 OFF**.
- d. اضغط على زر **➡** للتنقل حتى الوصول إلى اختيار إيقاف المؤقت.



e. اضغط على زر **⬅** لتأكيد الاختيار والخروج.

⚠ ملاحظة

- ومن غير المستحسن تشغيل المؤقت وإيقافه ليكون على نفس القيم، وفي حالة حدوث ذلك.
- فسيتم التعامل مع المؤقت الفعال طبقاً للأولوية على النحو الوارد في الجدول أدناه.

المؤقت	الأولوية
ON TIMER 2	1 (الأعلى)
OFF TIMER 2	2
ON TIMER 1	3
OFF TIMER 1	4 (الأقل)

(B) تشغيل/إيقاف ضبط الموقت - ضبط الموقت اليومي

- a. اضغط باستمرار على زر ④ TIMER لمدة 3 ثوانٍ.
- b. تشغيل إعداد الموقت 1
- i. "MON" سيومض.
- ii. استخدم زر ◀ أو زر ▶ لتحديد اليوم ثم اضغط على زر ▶ لتأكيد اليوم.
- iii. ستومض الساعة. استخدم زر ▶ أو زر ◀ للتبديل بين الساعة والدقيقة.



- اضغط على زر ▲ أو زر ▼ لتغيير الساعة والدقيقة.
- اضغط على زر ▶ لتأكيد الضبط.
- iv. كرر الخطوات من الثانية إلى الثالثة لإعداد مؤقت الأيام الأخرى.

- c. تشغيل إعداد الموقت 2
- i. اضغط على زر ④ TIMER مرة أخرى لتشغيل إعداد الموقت 2. ثم سيومض "MON".
- ii. استخدم زر ▶ أو زر ◀ لاختيار اليوم واضغط على زر ▶ لتأكيد اليوم.
- iii. ستومض الساعة.



- اضغط على زر ▲ أو زر ▼ لتغيير الساعة.
- اضغط على زر ▶ لتأكيد الساعة. ثم ستومض الدقائق.
- iv. كرر الخطوات من الثانية إلى الثالثة لإعداد مؤقت الأيام الأخرى.

- d. إيقاف إعداد الموقت 1
- i. اضغط على زر ④ TIMER مرة أخرى لإيقاف إعداد الموقت 1. ثم سيومض "MON".
- ii. استخدم زر ▶ أو زر ◀ لتحديد اليوم واضغط على زر ▶ لتأكيد اليوم.
- iii. ستومض الساعة.



- اضغط على زر ▲ أو زر ▼ لتغيير الساعة.
- اضغط على زر ▶ لتأكيد الساعة. ثم ستومض الدقائق.
- iv. كرر الخطوات من الثانية إلى الثالثة لإعداد مؤقت الأيام الأخرى.

تعليمات التشغيل

1.  زر  - اضغط مرة واحدة لبدء تشغيل وحدة تكييف الهواء.
- اضغط مرة أخرى لوقف وحدة التكييف.
2.  زر  - اضغط على زر  أو  لزيادة أو تقليل درجة الحرارة المحددة.
- اضغط على زر  FAN مع زر  SWING و زر  VIEW في وقت واحد لتغيير ضبط درجة الحرارة بين التدرج المنوي (°C) والتدرج الفرهنهيتي (°F).

⚠ ملاحظة

- يتوفر عرض درجة حرارة الغرفة للنماذج المختارة فقط.

3.  زر - اضغط باستمرار لمدة 3 ثوان لتشغيل/إيقاف تشغيل شاشة LED الموجودة بالوحدة المثبتة على الحائط.
4.  زر (تابع الموديل) - اضغط على زر  لتشغيل/إيقاف التشغيل الهادئ.
5.  زر (تابع الموديل) - اضغط على زر  لتشغيل/إيقاف التشغيل الشديد.
6.  زر MODE - اضغط على زر  لتحديد نوع وضع التشغيل.
- بالنسبة للوضع البارد فقط، فإن الأوضاع المتاحة هي كما يلي:  COOL،  DRY،  FAN.
- بالنسبة لوضع المضخة الساخن، فإن الأوضاع المتاحة هي كما يلي:  COOL،  HEAT،  AUTO،  FAN،  DRY.
7.  زر TIMER

⚠ ملاحظة

- انتظر 10 ثوان للخروج من إجراء تهيئة الساعة.
- تهيئة الساعة تكون على مدار 24 ساعة.

(A) لضبط الساعة - اضغط على زر  TIMER مع زر  لمدة 3 ثوان في وقت واحد.
a. ستومض الساعة.

88:88


- b. اضغط على زر  أو زر  لتغيير الساعة.
- c. اضغط على زر  لتأكيد الساعة، ثم ستومض الدقائق.

88:88


- d. اضغط على زر  أو زر  لتغيير الساعة.
- e. اضغط على زر  لتأكيد الدقائق، ثم سيومض "MON".
- f. اضغط على زر  أو زر  لتغيير اليوم.
- g. اضغط على زر  لتأكيد اليوم.

إرشادات جهاز التحكم BRC51D

إرشادات جهاز التحكم BRC51D61/63

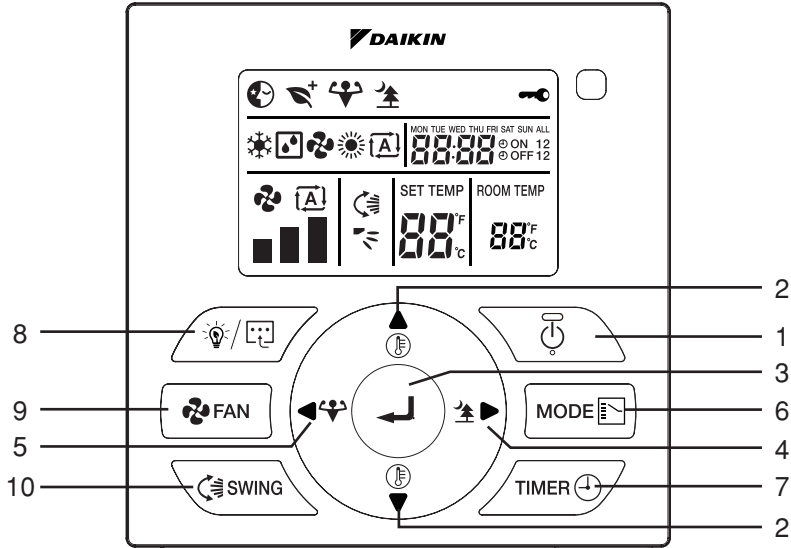

إرشادات جهاز التحكم BRC51D62/66

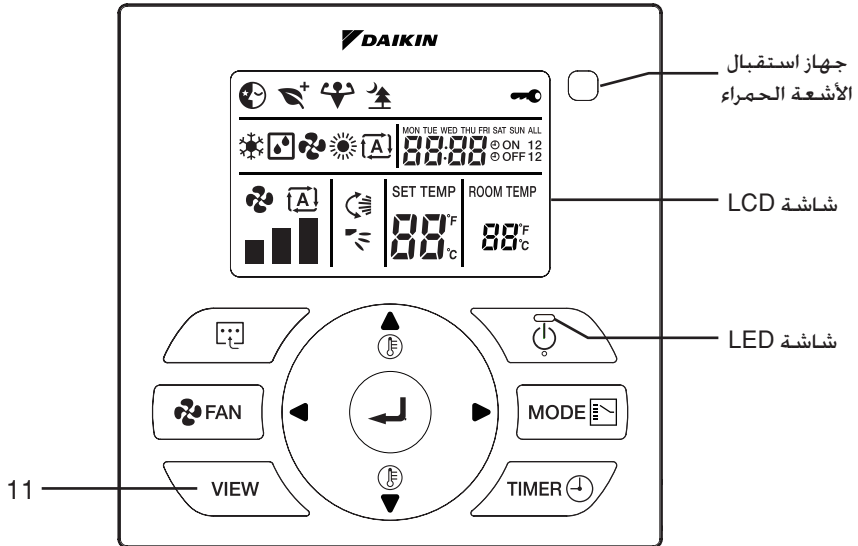

DAIKIN



كتيب التشغيل

عربي

كتيب التشغيل
توصيل السماعة



OM-BRC51D-0616(2)-DAIKIN
رقم الجزء: R08019045189B